

## Boston BTU-200 clip tuner with chromatic/guitar/bass/violin/ukulele mode

### BTU-200

### User's Manual


Thank you very much for purchasing the Boston BTU-200 clip tuner with full color display. Please read this manual carefully to make sure that you use the tuner correctly and keep it for future reference.

#### 1 General instructions:

- Never use alcohol, petrol or other strong chemicals on the exterior or on the LCD screen.

#### 2 Battery use:

- Check the polarity when putting in a new battery.
- Remove the battery when the unit is not in use for a long time.
- To reset to factory default, remove the battery for about 10 seconds.
- Replace the battery when the display turns weak or unclear.
- Dispose of the old battery properly.

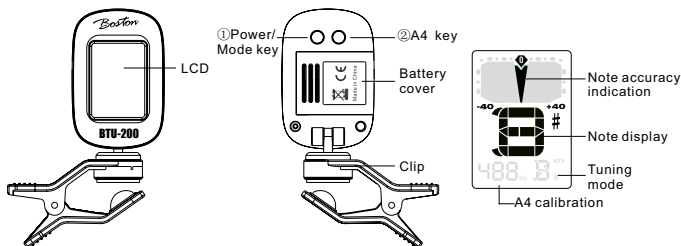

#### 3 Operation:

- Press ①Power/ Mode key for 2 seconds to switch the unit on. When on, press ①Power/ Mode key for 2 seconds to switch the unit off. After 3 minutes of no detected vibrations the unit will switch off automatically.
- When on, press ①Power/ Mode key shortly to switch mode from C (chromatic) to G (guitar), B (bass), V (violin) or U (ukulele). The selected mode will be memorized for future usage.
- Standard pitch of the BTU-200 is A4=440Hz. To change the calibration shortly press ②A4 key. The range that can be set is A4=430-450Hz.
- Follow the instructions indicated by the note indicator and arrow section in the display and change pitch. A yellow area will indicate to raise pitch, a red area will indicate to lower pitch. When the indicated note has reached perfect pitch the middle arrow will light blue.

#### 4 Technical summary:

- tuning mode: chromatic, guitar, bass, violin, ukulele
- tuning range: B0 - B7
- A4 calibration: 430 - 450Hz
- tolerance: +/- 1 cent
- input method: vibration
- power: 1x 3V CR2032 battery (enclosed)